



# THE ORIGINAL GILES TACTICAL SHOTGUN SLING™

Installation procedure for:


## REMINGTON 870/11-87 AND MOSSBERG 590/9200 SHOTGUNS WITH STANDARD FACTORY STOCKS

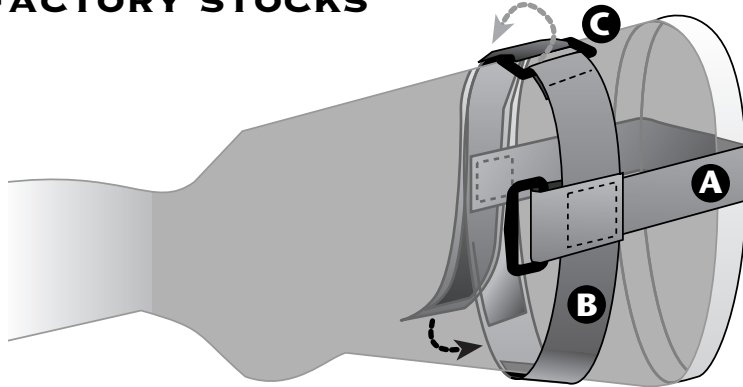

Buttstock installation

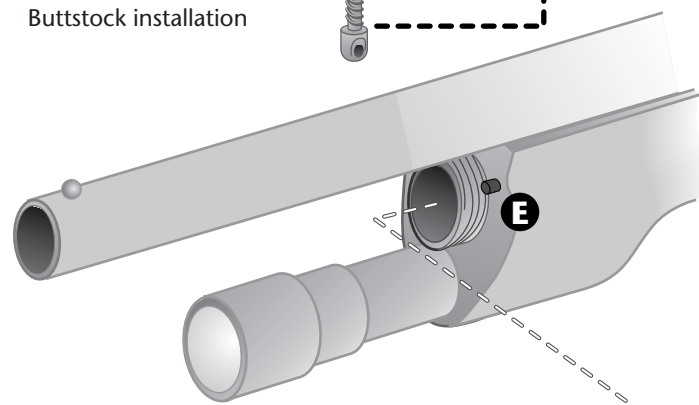

Forend installation

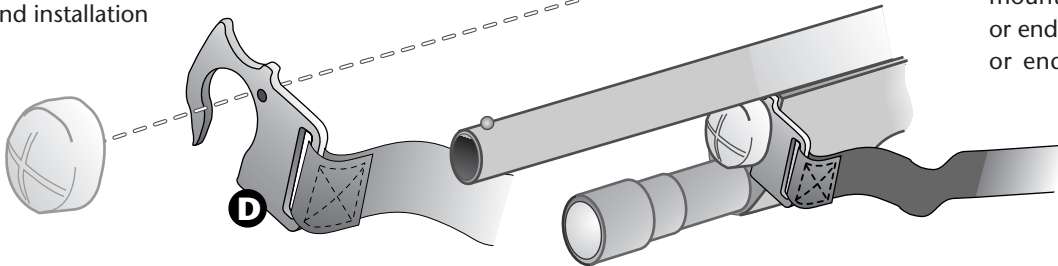


This is how the attached sling should look. Buckle **H** slides to adjust overall length of the sling. Buckle **I** slides freely along the sling, allowing the sling loop to adjust in length as you move and shift positions. Buckle **J** acts as a stop, preventing buckle **I** from sliding too far back. This is what allows you to release the weapon into the vertical position across your chest.

**WARNING:** Mishandling of firearms may cause serious injury or death. Before practicing with your Original Giles Tactical Sling™ make sure your weapon is unloaded and pointed in a safe direction. When handling the firearm, make sure your index finger remains straight along the weapon's frame and not in contact with the trigger! **Do not touch the trigger until your sights are on the target and you are ready to fire.** If the sling interferes with the safe operation or handling of the weapon, discontinue use. For further safety considerations, consult the owner's manual of your weapon and seek professional assistance.

**\*Note:** While the actual attachment hardware is different for the various models listed, the method of installation is the same. Instructions assume a right-handed sling. Reverse for left-handed use.

- Remove the rear sling swivel stud. Place the rear sling attachment assembly around the rear of the buttstock. Bring it forward until strap **A** is snug. Now, pass strap **B** up through buckle **C** on top of the stock. Wrap it back around outside and secure it in place with the hook and loop fasteners.
- To ensure a secure fit, reinstall the sling swivel stud through the hole in strap **B** into the butt stock. If this hole frays in use, reseal by exposing frayed area to the flame from a lighter for several seconds.
- Remove the magazine tube extension or tube cap. Place sling mount **D** over the threaded section of the magazine tube. Align detent **E**, protruding from the magazine tube lug, with the detent hole in the sling mount. When the mount is flush against the lug, a new ball detent will protrude from the mount to secure the extension tube or end cap. Screw the extension tube or end cap back into place firmly.

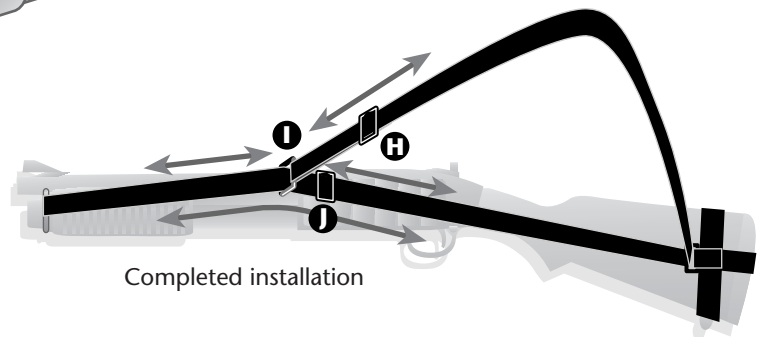

Completed installation



The WILDERNESS  
TACTICAL PRODUCTS  
L.L.C.

Manufacturers and distributors  
of the finest tactical gear in the world.

5130 North 19th Ave., Suite 7 • Phoenix, AZ 85015 • 602/242-4945  
www.thewilderness.com • Toll-free order line: 1-800/775-5650

© 2001 All rights reserved.  
Reproduction in whole or in part is prohibited.

053101