

THE ORIGINAL WILDERNESS ZIP SLIDE HOLSTER™

Instructions for proper use

WARNING: Mishandling of firearms may cause serious injury or death. Before practicing with your Zip Slide Holster™ make sure your weapon is unloaded and pointed in a safe direction. When drawing the firearm, make sure your index finger remains straight along the weapon's frame and not in contact with the trigger! **Do not touch the trigger until your sights are on the target and you are ready to fire.** If the holster interferes with the safe operation or handling of the weapon, discontinue use. For further safety considerations, consult the owner's manual of your weapon and seek professional assistance.

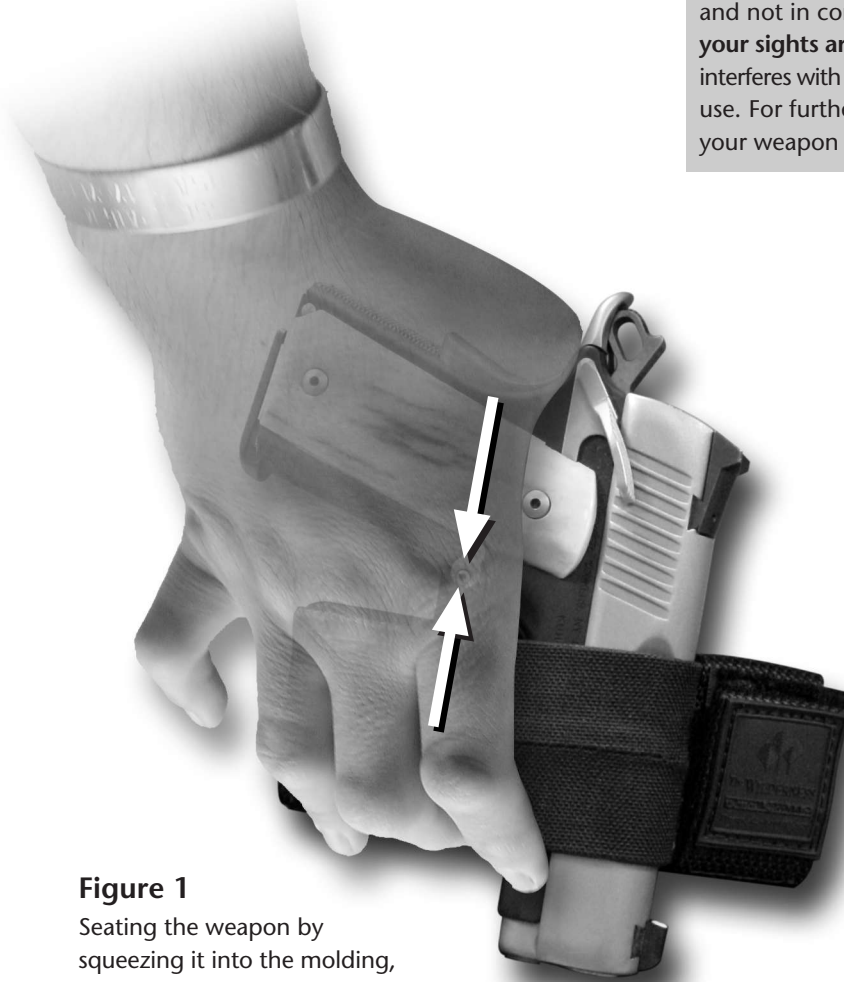


Figure 1
Seating the weapon by squeezing it into the molding, seen from the front.

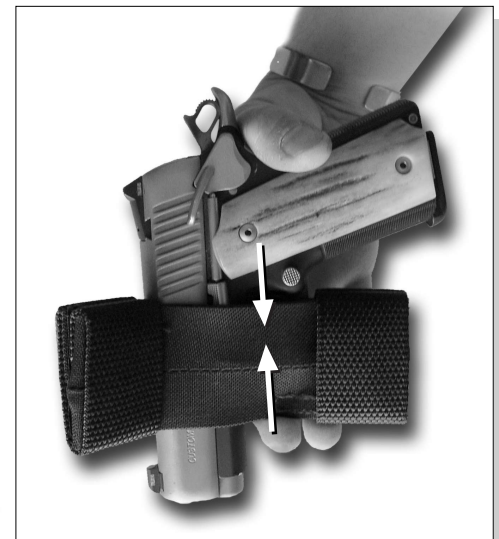


Figure 2
Seating the weapon by squeezing it into the molding, seen from behind.

Many holsters are relatively loose and rely upon some sort of retention strap system to secure the weapon. The Wilderness Original Zip Slide Holster® is a "pressure secure" holster which uses molded pressure points to hold the weapon in place. Because the Zip Slide® is pressure secured, the weapon will not fall into place when reholstered.

To secure the weapon, insert it into the holster with the **trigger finger off of the trigger, outside of the trigger guard**. Lightly push the weapon in until the trigger guard catches in the molding at the top of the holster, then use the thumb and forefinger (as shown in figures 1 and 2) to squeeze the weapon into place.



Weapon properly seated in Zip Slide®



The WILDERNESS
TACTICAL PRODUCTS
L.L.C.

Manufacturers and distributors
of the finest tactical gear in the world.

060101

5130 North 19th Ave., Suite 7 • Phoenix, AZ 85015 • 602/242-4945
www.thewilderness.com • Toll-free order line: 1-800/775-5650

© 2001 All rights reserved.
Reproduction in whole or in part is prohibited.